

buttons for adjustment. To complete the operation, depress the PROG three more times to store the value and exit the adjustment mode.

Down Force Adjustment: Depress the PROG button twice to enter this mode and then depress either the "+" or "-" buttons for adjustment. To complete the operation, depress the PROG two more times to store the value and exit the adjustment mode.

The opener should be run through a complete cycle, open/close after each adjustment.

WALL UNIT

The Wall unit indicates difficulties during use of the garage door opener as well as controlling the opening and closing of the garage door.

LOW BATTERY: Illuminates when car remote's battery is low. Change Car Remote

battery as soon as possible.



SAFETY FAULT: Illuminates when photo eye sensors have been tripped or there is a door jam.



LOCK: Illuminates when the system vacation lock is engaged
